

727

Component Part Numbers

Mostly 100
let me have
any updates
you have

ITEM	Part No	MPD Ref	MM Ref
110v 60hz Converter	PS-62-66D		
35 F Control Valve	106932-1-1	7-21-26	
35 F Thermostat	129150-2-1	7-21-24	
A Sys Hydraulic Accumulator	1356-603303	7-29-17	26266
AC Amperage Indicator	124-837	7-24-09	31-00-11
AC Voltage Indicator	124-832	7-24-10	31-00-11
ADF Antenna	137A5		34
ADF Control Panel 614L-8	522-2357-016		34
ADF Receiver 51y-4	522-1836-00		34
Aft Cargo Door Faring Clevis	65-30002	52	52
Aft Cargo Door Faring Latch	10-60241	52	52
Aileron Control Disconnect Device		7-27-06	22581
Aileron Hyd Compensator Cartridge		7-27-03	27-10-143
Aileron Hyd Low Px Warning Switch		7-27-04	27-10-144
Aileron Power Control Unit	129304	7-27-44	27-10-101
Aileron Power Jack Control	1293-7		
Aileron Servo Motor & Drive Assy	10-60441-17	7-22-08	22-11-01/11
Aileron Servo Stop Mechanism	540930-2-2	7-22-09	22-11-01/11
Aileron Supply Shutoff Valve		7-27-01	27-10-142
Air Cycle Machine	204050-10	7-21-22	21-55-11
Air Data Sensor	2585803-1		22-00-00
Air Mix Valve Position Indicator			
Air Mixing Valve	321402-1-1	7-21-04	21-61-11
Air Stair Door Actuator	65-17858-5	7-52-02	56-62-71
Airstair Control Valve (Emergency)	870613		
Alternate Flap Drive Unit		7-27-16	27-51-141
Angle Of Attack Sensor	10-60878-3		
Anti - Collision Light	32826	7-33-02	33-43-0
Anti - Collision Light	G9325A1	7-33-02	33-43-0
Anti - Ice Valve	129525		
Anti - Skid Control Unit	42-527B	7-32-37	32-42-0/61
Anti - Skid Control Valve	39-043A	7-32-02	32-42-01/21
Anti - Skid Control Valve	65-17913-8	7-32-02	32-42-01/21

727 Component Part Numbers

Mostly 100
let me have
any updates
you have

Anti - Skid Detector Transducer	40-533	7-32-36	32-42-0/1
Ash Tray	2020-3/0		None
ATC Control Panel G-1605a	G-1605a		
ATC Transponder 612a-3	522-2703-000	7-34-40	34-43-0
ATC Transponder 612a-3	522-2703-011	7-34-40	34-43-0
ATTITUDE DIRECTION INDICATOR (ADI)	522-3487-002		
Attitude Direction Indicator (ADI)	522-3487-004		
Audio Selector Control Panel	G2260	7-23-18	23-51-11
Auto - Pilot Accessory Unit	65-24917-18	7-22-07	37217
Auto - Pilot Control Panel	2585802-4	7-22-05	37217
Auto - Pilot Pitch Computer	2585804-3	7-22-23	22-11-121
Auto - Pilot Stabilizer Trim Potentiometer	2586373	7-22-01	22-11-01/61
Auto - Pilot Stabilizer Trim Servo	10-60769-2	7-22-19	22-11-01/21
Autopilot Yaw Damper Transfer Valve		7-22-22	11649
Battery Charger	2-301-1	7-24-04	None
Boost Pump Bypass Valve		7-28-12	28-22-41
Brake Lockout Debooster Valve	71300-5007	7-32-19	32-41-0/21
Brake Shuttle Valve	71477-4	7-32-35	32-41-51
Brake System Interconnect Valve		7-29-29	33571
Breathing Set Bottle	5600-ICIA-E23A		
Breathing Set Scott	6379-2C		
Bus Protection Panel	10-3324-11	7-24-14	None
Cabin Air Temp Indicator	162BL503	7-21-11	31-00-11
Cabin Altimeter & Differential Pressure Indicator	CA-DP-10-ILB	7-21-36	21-30-0 , 31-00-11
Cabin Rate Of Climb Indicator	RC201LB	7-21-37	21-30-0 , 31-00-11
Cabin Temperature Regulator	548376-3	7-21-48	21-61-21
Cable Driven Ram Air Inlet Door Actuator	525374	7-21-01	21-56-11
Capt Window No 1	5-89354-3129		
Capt Window No 2			
Capt Window No 3	65-16323-25		
Capt Window No 4			
Capt Window No 5			

727

Component Part Numbers

Mostly 100
let me have
any updates
you have

Cargo Heat Outflow Valve	32-2684-002	7-21-06	21-42-11
Clock	W33-7535-3D	7-31-01	31-00-11
Clock Battery		7-31-02	
Co Pilots Window No1	65c80669-8		
Co Pilots Window No2	5-71762-3002		
Co Pilots Window No3	65-16323-26		
Co Pilots Window No4	5-89357-22		
Co Pilots Window No5	5-89358-42		
Cockpit Voice Recorder	93A100-30	7-23-01	23-00-00
Compass Rack	614937-101		
Compass Rack	614937-101		
Compensator Unit		7-28-29	28-41-12/28-09-100
Compressor Discharge Temp Indicator	163BL501	7-21-12	31-00-11
Constant Speed Drive Unit	700842	7-24-01	24-10-0/01/11
Continuous Loop Sensing Elements		7-26-08	26-12-0/1 26-14-0/1
Control Cabin Air Muffler		7-21-49	21-21-01
Control Column		7-27-36	27-00-11
Course Deviation Indicator (CDI)	331A-9G		
Course Deviation Indicator (CDI)	331A-6A		
Cowl Anti IceThermostatic Control Valve	392708-1-1	7-30-06	30-21-21
Cowl Anti-Ice High Pressure Shutoff Valve	225485	7-30-08	30-21-11
Crossfeed Manifold Valve		7-28-03	28-22-22
Crossfeed Manifold Valve		7-28-03	28-22-22
Crossfeed Manifold Valve		7-28-03	28-22-22
CSD Ejector Air Shutoff Valve		7-75-01	75-22-1
CSD Ejector Air Shutoff Valve		7-75-01	75-22-1
CSD Oil Cooler	UA-526276-3	7-24-23	22578
CSD Oil Temperature Indicator	124-838	7-24-02	31-00-11
cup holder	2100-3/C		None
DC Amperage Indicator	124-834	7-24-05	31-00-11
DC Voltage Indicator	124-833	7-24-06	31-00-11
Defuel Valve	6568	7-28-02	28-23-1

727 Component Part Numbers

Mostly 100
let me have
any updates
you have

Directional Gyro	2585302-1		
DME 860e-5	622-2921-002	7-34-41	34-45-0
Door Snubber	90-10072-2		
Dual Pneumatic Pressure Indicator		7-36-02	31-00-21
Elevator Feel Control Unit	65-27495	7-27-41	27-30-111
Elevator Feel System Computer	401-60272-3	7-27-42	27-30-101
Elevator Hyd Compensator		7-27-12	27-30-93
Elevator Hyd Low Pressure Warning Switch		7-27-13	27-30-94
Elevator Power Control Unit	68000-5003	7-27-52	27-30-81
Elevator Power Control Unit	68000-5003	7-27-52	27-30-81
Elevator Supply Shutoff Valve		7-27-11	27-30-92
Elevator Transfer Valve, Autopilot		7-22-21	15302
ELT	607690-2		
Encoding Altimeter	28007-002	7-34-07	31-00-11
Encoding Altimeter	16007-168	7-34-07	31-00-11
Engine Bleed Pressure Transmitter	ST106AB	7-36-06	36-21-11
Engine Cone Bolts	10-60517-53	7-71-02	71-21-0
Engine Cone Bolts	10-60517-40	7-71-02	71-21-0
Engine Cone Bolts	10-60517-39	7-71-02	71-21-0
Engine Cone Bolts	10-60517-46	7-71-02	71-21-0
Engine Cone Bolts	10-60517-54	7-71-02	71-21-0
Engine Driven Generator (40 KVA)	976J598-1	7-24-12	24-20-0/1
Engine Fire Bottle	806000-11		
Engine Fire Bottle	805500-12	7-26-01	26-21-1
Engine Fire Bottle	10-3275-12	7-26-01	26-21-1
Engine Fire Selector Valve	511000	7-26-02	26-21-21
Engine Fire Sensor	1050-800-375-6	7-26-03	26-11-0/01/11/12
Engine Fuel Flow Indicator	8DJ88LWC3		
Engine Fuel Flow Power Supply Unit	stj80gaa2	7-73-03	73-31-12
Engine Fuel Shut - Off Valve	AV16B1519D	7-28-04	28-22-1
Engine Oil Tank	565016	7-79-01	79-11-0
Engine Tachometer Indicator N1	8DJ81LWN2U	7-77-05	77-12-0/1
Engine Tachometer Indicator N2	8DJ81LWN2	7-77-05	77-12-0/1
Engine Tachometer Indicator N2	8DJ81LXH2	7-77-05	77-12-0/1

727

Component Part Numbers

Mostly 100
let me have
any updates
you have

EPR Indicator	JG298A4	7-77-06	31-00-11'77-11-0
EPR Transmitter	LG14C14	7-77-07	77-11-0/11
EPR Transmitter	LG80A6	7-77-07	77-11-0/11
Equipment Cooling Blower	6577-1	7-21-44	21-58-11
Essential Power Failure Relay		7-24-16	None
Essential Power Selector Relay		7-24-21	None
Evacuation Slide	15d22129	7-25-04	
Evacuation Slide Bottle		7-25-05	
Exhaust Temperature Indicator (EGT)	152BL801A	7-77-04	77-21-42/51
External Power Relay	B102F		
External Power Transformer Rectifier		7-24-20	None
Fan Air Inlet Door Actuator		7-21-16	21-56-71
Feel Differential Sensing Switch	401-60278-3		
Fire Detection Power Unit	1011B		
Fire Detector	10-60278-3		Firewall
First Aid Kit		7-25-04	
Flap Bypass Valve		7-27-17	27-51-151
Flap Control Valve	65-40449-3	7-27-19	27-51-51
Flap Drive Angle Gearbox	65-22944-9		
Flap Drive Angle Gearbox	65-22944-7		
Flap Drive Angle Gearbox	65-22819-5		
Flap Drive Angle Gearbox	65-22819-4		
Flap Drive Power Unit	65-21945-4		
Flap Drive Power Unit	65-21945-3		
Flap Drive Power Unit	793T100-7	7-27-15	27-51-61
Flap Flow Limiting Valves		7-27-20	27-51-241
Flap Position Indicator	18-1299-3-2	7-27-55	27-52-0
Flap Position Indicator	18-1299-3	7-27-55	27-52-0
Flap Position Transmitter	P35-1	7-27-23	27-52-2/13
Flap Position Transmitter	2514-1D	7-27-23	27-52-2/13
Flap Position Transmitter Assy	65-23564-27	7-27-23	27-52-2/13
Flap Position Transmitter Assy	65-42342-4	7-27-23	27-52-2/13
Flap Position Transmitter Assy	65-42342-3	7-27-23	27-52-2/13
Flap Position Transmitter Assy	65-23564-28	7-27-23	27-52-2/13

727

Component Part Numbers

Mostly 100
let me have
any updates
you have

Flight Control Modulator Unit	65-17823-2		
Flight Control Modulator Unit	65-17823		
Flight Data Recorder	980-4000-008	7-31-02	31-24-0/41
Flight Direction Indicator	329B-7		
flight director controller	522-3768-001		
Flight director controller	614E-7E		
Flight Instrument Accessory Unit	65-60214-61		31-24-0/41
Flight Recorder Magazine	101023		31-24-0/41
Flight Steering Computer	562A-5F		
Flight Steering Computer	522-3121-169		
Flite Fone (RE-18D) Transceiver	400-0125-102	7-23-01	23-00-00
Flight Aattendant Belts	h4002-2a		
Flux Valve	620359	-34-	34-00-00
Frequency Indicator	124-835	7-24-11	31-00-11
Fuel Boost Pump	258000-3	7-28-07	28-22-21
Fuel Boost Pump Removal Valve	509200	7-28-09	28-22-31
Fuel De-Icing Heater	522649	7-73-06	73-14-1
Fuel Dump Control Valve	F61B0138M2	7-28-13	28-31-0/11
Fuel Dump Nozzle Valve	AV16B1659C	7-28-16	28-31-1
Fuel Flow Indicator	8DJ88LWC3	7-73-02	31-00-11
Fuel Heater De-Icing Valve		7-73-08	73-14-21
Fuel Level Control Valve	F61B0132		
Fuel Pressure Drop Warning Switch	42D185	7-73-09	73-14-21
Fuel Quantity Indicator	393086-01236	7-28-23	28-41-01/ 31-00-11
Fuel Quantity Indicator	393026-03508	7-28-23	28-41-01/ 31-00-11
Fuel Quantity Transmitter	391097-1612	7-28-25	28-41-12
Fuel Quantity Transmitter	391097-1604	7-28-25	28-41-12
Fuel Quantity Transmitter	391097-1606	7-28-25	28-41-12
Fuel Quantity Transmitter	391097-1607	7-28-25	28-41-12
Fuel Quantity Transmitter	391097-1608	7-28-25	28-41-12
Fuel Quantity Transmitter	391097-1609	7-28-25	28-41-12
Fuel Quantity Transmitter	391097-1611	7-28-25	28-41-12

Component Part Numbers

Mostly 100
let me have
any updates
you have

Fuel Quantity Transmitter	391097-1613	7-28-25	28-41-12
Fuel Quantity Transmitter	391097-1614	7-28-25	28-41-12
Fuel Quantity Transmitter	391097-1615	7-28-25	28-41-12
Fuel Quantity Transmitter	391097-1616	7-28-25	28-41-12
Fuel Quantity Transmitter	391097-1617	7-28-25	28-41-12
Fuel Quantity Transmitter	391097-1610	7-28-25	28-41-12
Fuel Quantity Transmitter	391097-1605	7-28-25	28-41-12
Fuel Tank Compensator	391041-009		
Fuel Temperature Bulb		7-28-21	28-43-0
Fuel Temperature Indicator	162BL701	7-28-22	28-43-0
Fueling Shutoff Valve		7-28-15	28-21-101
Gasper Fan	500702-4620	7-21-03	21-23-1
Generator Breaker	BAC10-60450-1	7-24-13	24-20-41
Generator Control Unit	902F242-5		None
Generator Drive Load Controller	700742	7-24-03	None
Ground Spoiler Actuator	65-37559-3	7-27-30	27-62-81
Ground Spoiler Actuator	65-71680-1	7-27-30	27-62-81
Ground Interconnect Valve		7-29-07	29919
Ground Spoiler Shutoff Valve (Lockout)		7-27-32	27-62-61
Ground Spoiler Valve	1697EA	7-27-31	27-62-71
Ground Venturi Fan	131160-1-1		21-00-00
HF Antenna Coupler 309a-9	522-3375-004	7-23-01	23-00-00
HF Antenna Tuner	309A-9	7-23-14	23-00-00
HF Control Panel 714e-3d	777-1029-007	7-23-13	37218
HF CONTROL PANEL 714E-3D	777-1029-007	7-23-13	37218
HF Lightning Arrestor	AD-969-TRS	7-23-15	11650
HF Transceiver 618T-2	522-1501-041	7-23-11	37218
HF Transceiver 628t-1	622-3371-001	7-23-11	37218
High Pressure Modulating & Shutoff Valve	392220-1-1	7-36-01	36-12-42
Hyd Brake Pressure Transmitter		7-32-26	32-41-71
Hydraulic Accumulator	1356-603303		
Hydraulic Brake Accumulator	1356-603399	7-32-31	32-41-0/61
Hydraulic Brake Pressure Indicator	A100-30	7-32-24	31-00-11
Hydraulic Filling Pump Hand	71234		

727

Component Part Numbers

Mostly 100
let me have
any updates
you have

Hydraulic Filter	10-60593-1		
Hydraulic Filter	10-60565-4		
Hydraulic Flap Drive Motor	MS9-3911-30ZE4C	7-27-18	27-51-61
Hydraulic Overheat Switch	975-0018-003	7-29-14	Various 29 MPD
Hydraulic Package Module	65-17851-33		
Hydraulic Package Module	65-17869-7		
Hydraulic Pressure Indicator	SRL07BZ	7-29-16	31-00-11
Hydraulic Pressure Reducing Valve	3057000-7		
Hydraulic Pressure Reducing Valve	A62028-1		
Hydraulic Pressure Relief Valve	316565	7-29-04	29-11-61/64
Hydraulic Pressure Relief Valve (Air Door)	10-847		
Hydraulic Pressure Transmitter	ST7R	7-29-15	29-31-1/2
Hydraulic Quantity Indicator	EA102ANH149H	7-29-20	29-33-0/31-00-11
Hydraulic Quantity Indicator	B711-1	7-29-20	29-33-0/31-00-11
Hydraulic Quantity Indicator	B712-4	7-29-20	29-33-0/31-00-11
Hydraulic Quantity Indicator	EA1065A2371	7-29-20	29-33-0/31-00-11
Hydraulic Quantity Indicator	EA100ANH153H	7-29-20	29-33-0/31-00-11
Hydraulic Quantity Indicator	B712-2	7-29-20	29-33-0/31-00-11
Hydraulic Quantity Transmitter	EA1093A2408	7-29-02	29-33-0/1
Hydraulic Reservoir	65-17856-2	7-29-26	29-21-1
Hydraulic Reservoir	665-17815-1	7-29-24	37254
Hydraulic Reservoir Air Pressure Regulator	314160-2	7-29-06	41242
Hydraulic Shut - Off Valve Motor Operated	AV16B1350	7-29-08	44529
Hydraulic Shut -Off Valve	AV13J5101		
Hydraulic Shut -Off Valve	AV13J5144		
Hydraulic Shut -Off Valve	AV13J5101		
Inbd Flap Drive Angle Gearbox	65-22819-3	7-27-53	27-351-81
Inbd Flap Drive Angle Gearbox	65-22819-4	7-27-53	27-351-81
Inbd Flap Drive Transmission Assy	2523767-25	7-27-38	27-51-0/41
Inbd Flap Drive Transmission Assy	65-26614-26	7-27-38	27-51-0/41
Inbd Flap Drive Transmission Assy	65-23560-12	7-27-38	27-51-0/41
Inbd Flap Drive Transmission Assy	65-26350-19	7-27-38	27-51-0/41
Inertial Navigation Unit ltn-72r	454620-01-28	7-34-50	34-69-0
INS Control Display Unit	454640-01	7-34-49	34-69-0

727 Component Part Numbers

Mostly 100
let me have
any updates
you have

INS Battery CA154-3A	500040-03	7-34-51	34-69-0
INS Mode Selector Unit	452100-02		
Instrument Amplifier	522-3120-005		
Interphone Amplifier	G-610-11	7-23-01	23-00-00
Landing Gear Accessory Unit	65-37568-46		
Landing Gear Selector Valve	S6025-2	7-32-20	32-31-0/31
Landing Light	Q4559y		
LE Flap & Slat Bypass Valve	65-17838-3	7-27-29	27-81-51
LE Flap & Slat Control Valve	1775EA	7-27-28	27-81-81
LE Flap Actuator	1U1110	7-27-26	27-81-22
LE Flap Actuator	1U1110-H	7-27-26	27-81-32
LE Flap Standby Hyd Motor Pump Assy	A0643-089A	7-27-25	27-81-41
LE Flap Standby System Shutoff Valve		7-29-11	29-21-31
LE Shuttle Valve		7-27-57	27-81-71
LE Slat Actuator	1U1095-5	7-27-26	27-81-32
LE Slat Actuator	1U1095-9-2	7-27-26	27-81-32
LE Slat Actuator	1U1103-2-2	7-27-26	27-81-32
LE Slat Actuator	1U1103-2	7-27-26	27-81-32
LE Slat Actuator	1U1103	7-27-26	27-81-32
LE Slat Position Indicating Switch	40141	7-27-50	27-82-0/11
Life Vest	5000100-1-5	7-25-04	
Liferaft	26037	7-25-04	
LifeVest Set	Various		
Low Oil Pressure Switch	42D107A1	7-79-07	79-33-1
Lower Aft Body Overheat Control Unit		7-26-06	26-14-11
Mach Air Speed Warning Switch	B0704-10004		
Mach Airspeed Indicator	32755-539	7-34-08	31-00-11
Mach Airspeed Warning Switch	b707-10007		
Main Aircraft Battery	23186	7-24-25	24-30-11
Main Gear Brake Metering Valve	82700-14	7-32-06	32-41-0/11
Main Gear Brake Metering Valve	82700-15	7-32-06	32-41-0/11
Main Gear Door Safty Valve		7-32-03	32-32-41
Main Landing Gear Actuator	65-17830-4	7-32-04	32-32-0/2
Main Landing Gear Assembly	65-72761-27	7-32-38	32-11-0

727

Component Part Numbers

Mostly 100
let me have
any updates
you have

Main Landing Gear Assembly	65-72761-28	7-32-38	32-11-0
Main Landing Gear Brake	2-1147	7-32-42	32-41-32
Main Landing Gear Brake	2-1147-5	7-32-42	32-41-32
Main Landing Gear Brake	2-1147-6	7-32-42	32-41-32
Main Landing Gear Door Actuator	7-3141-3	7-32-33	32-32-81
Main Landing Gear Door Sequence Valve	1U-1085	7-32-07	32-32-21
Main Landing Gear Door Sequence Valve	1U-1084	7-32-01	32-32-31
Main Landing Gear Downlock Bungee	69-15364-3	7-32-49	32-32-51
Main Landing Gear Lock Actuator	65-17819-4	7-32-05	32-32-61
Main Landing Gear Manual Extension G'box	65-24525-3	7-32-49	32-32-51
Main Landing Gear Side Strut	65-17657-17	7-32-38	32-11-0
Main Landing Gear Swivel	65-17868-3		
Main Landing Gear Tyre	aps01351	7-32-40	32-45-1
Main Landing Gear Uplock Bungee	69-20280-1	7-32-49	32-32-51
Main Landing Gear Wheel	3-1306-1	7-32-40	32-45-1
Main Oxygen Bottle	801307-00		
Manual Ventral Stairs Pump	316525	7-52-04	52-62-0/171
Marker Beacon Transceiver	51Z4		
MLG Actuator Walking Beam		7-32-46	32-32-11
MLG Wheel Well Door Actuator Hose	H6P0300CCK	7-32-33.1	32-32-81
MLG Wheel Well Door Actuator Hose	H6R0310DD-K	7-32-33.1	32-32-81
MLG Wheel Well Door Actuator Hose	BACH8A08NN0310T	7-32-33.1	32-32-81
MLG Wheel Well Door Actuator Hose	30AT06K0300	7-32-33.1	32-32-81
Motor Driven Ram Air Modulation Door Actuator	541248-2-1	7-21-01.1	21-56-21
Nesa Glass Thermal Switch	G1-1-1		
NLG Hydraulic Transer Cylinder		7-32-45	32-35-11
NLG Steering Metering Valve	1692RA4	7-32-10	32-51-0/21
No2 Inlet Cowl Anti-Ice Shutoff Valve		7-30-05	30-21-31
Nose Gear Steering Cylinder	65-17814-11	7-32-09	32-51-0/31
Nose Gear Taxi Light		7-33-04	33-42-11
Nose Landing Gear Actuator	65-72762-33	7-32-17	32-33-1
Nose Landing Gear Assembly	65-72762-8	7-32-39	32-21-0
Nose Landing Gear Drag Brace	65-16368-13	7-32-39	32-21-0

Component Part Numbers

Nose Landing Gear Lock Actuator	65-17810-9	7-32-13	32-33-0/11
Nose Landing Gear Retention Bungee	69-14100-1	7-32-18	32-33-22
Nose Landing Gear Tyre	01h7354-2	7-32-41	32-45-11
Nose Landing Gear Wheel	3-1070	7-32-41	32-45-11
Offset Gear Box	65-22819-3	7-27-24	27-51-91
Offset Gear Box	65-22819-4	7-27-24	27-51-91
Oil Filter By-Pass Switch	10-3269-8	7-79-08	79-34-0/11
Oil Filter By-Pass Switch	42D107A1	7-79-08	79-34-0/11
Oil Pressure Indicator	SRL04L	7-79-06	79-32-0/31-00-11
Oil Pressure Indicator	SRL04G	7-79-06	79-32-0/31-00-11
Oil Pressure Transmitter	ST104Y	7-79-05	79-32-1
OIL QUANTITY INDICATOR	393084-04359	7-79-04	79-31-0
Oil Quantity Indicator	393020-003	7-79-04	79-31-0
Oil Quantity Tank Unit	391080-08096	7-79-03	79-31-1
Oil Temperature Indicator	162BL704C	7-79-09	79-34-0/11
Oil Temperature Transmitter		7-79-10	79-34-21
Otbd Flap Drive Angle Gearbox	65-23467-2	7-27-21	27-51-101
Otbd Flap Drive Transmission Assy	65-26613-10	7-27-39	27-51-0
Otbd Flap Drive Transmission Assy	65-23559-11	7-27-39	27-51-0
Otbd Flap Drive Transmission Assy	65-257765-19	7-27-39	27-51-0
Otbd Flap Drive Transmission Assy	6523559-24	7-27-39	27-51-0
Outboard Aileron Lockout Gearbox	65-24400-13	7-27-02	27-10-131
Oxygen Pressure Indicator	182972		
Oxygen Pressure Indicator	182936		
Oxygen Pressure Regulator	27660-1		
Oxygen Pressure Regulator	28000-1		
Oxygen Pressure Transmitter	831SG250-20R		
oxygen sov	10-60733-1		
PA Amplifier	346D1	7-23-05	23-31-02
PA Amplifier Accessory	65-40180-1	7-23-05	23-31-02
Pack Cooling Fan	207562-1	7-21-23	21-56-91
passenger seat belt (type 1)	M3800-A		None
Passenger Seat Lap Belt	h36002a and h3800-a1		

727

Component Part Numbers

Mostly 100
let me have
any updates
you have

Pitch Control Channel	2585805-1	7-22-12	37217
Pitot Static Heat Ammeter	PG0B001	7-30-11	30-31-0/31-00-11
Pitot Tube	10-60702-3		
Pitot Tube Probe (Elev Feel Cmptr)		7-27-58	27-30-105/ 30-31-0
Pneumatic Actuator	65-38515-1	7-52-01	52-62-51
Pneumatic Brake Air Bottle	871792	7-32-21	32-43-11/31
Pneumatic Brake Control Valve	893222	7-32-35	32-43-0/1
Pneumatic Brake Pressure Indicator	SRL07AM	7-32-23	31-00-11
Pneumatic Brake Pressure Transmitter		7-32-26	32-43-41
pneumatic pressure tx	st106ab		
Pneumatic Px Indicator		7-29-09	29-31-1
Pneumatic Shut - Off Valve	129475		
Pneumatic Shut - Off Valve	320115		
Pneumatic Shut - Off Valve	320115		
Pneumatic Shut - Off Valve	129475		
Pneumatic Shut - Off Valve	F61C0058M1		
Pneumatic Shut - Off Valve	321464-2-1		
Pneumatic Shut - Off Valve (isolation)	321464-5-1		
Portable CO2 Fire Bottle	870905		
Portable Halon Fire Bottle	4B-195-111		
Portable Oxygen Bottle Puritan	3AA1800		
Portable Oxygen Bottle Scott	5500 CIA-Y-N		
Portable Oxygen Bottle Scott	5500 CIA BF 208		
Position Sensor	10-60441-65	7-22-02	22-11-71/81
Pressure Controller Auto	102518-11-1	7-21-14	21-31-0
Pressure Controller Manual	131046-1	7-21-14	21-31-0
Pressurization Outflow Valve	103280-5-1	7-21-08	21-31-0 , 21-31-11
Primary Heat Exchanger	178040-1	7-21-21	21-51-0 , 21-55-21 , 21-56-41
Pump Low Px Warning Switch		7-29-13	Various 29 MPD
Radar Antenna	MI-585066	7-34-39	34-41-21
Radar Indicator (DI-4001)	MI-585201	7-34-38	34-41-0

727

Component Part Numbers

Mostly 100
let me have
any updates
you have

Radar Transceiver	MI-585200-1	7-34-36	34-41-0
Radio Altimeter 860f1	522-3698-004		
Radome	65-73294-5		
Rain Repellant Timer	G60668		
Roll Control Channel	2585805-1	7-22-10	37217
Rudder & Elevator Position Indicator	10-60775-7	7-22-18	37217
Rudder Hyd Compensator Cartridge		7-27-08	27-20-124
Rudder Hyd Low Px Switch		7-27-09	27-20-123
Rudder Position Sensor		7-22-20	18954
Rudder Power Control Unit	59100-5009	7-27-06	27-20-141
Rudder Power Control Unit	1U1087		
Rudder Supply Shutoff Valve		7-27-07	27-20-122
Rudder Trim Actuator		7-27-10	27-20-161
Safety Relief Valve	103280-5-1	7-21-41	21-32-11
Secondary Heat Exchanger	178040-2	7-21-20	21-51-0 , 21-55-21 , 21-56-41
Selcal Control gables	g-2261		
Selcall	NA-126-2	7-23-16	23-22-0
Selcall Control Panel gables	g-2261	7-23-01	23-00-00
Self Luminescent Exit Sign	CANCA-3A		
Self Luminescent Exit Sign	602-09-4-003		
Semisub Xfeed Shut -Off Valve Actuator	MA11A1062		
Semisub Xfeed Shut -Off Valve Actuator	MA11A1061		
Semisubmerged Xfeed Shut -Off Valve	6563		
Smoke Detectors	30-231-26	7-26-07.2	
Speed Brake Control Valve	1697EA		
Speedbrake Fwd Drum Mechanism		7-27-47	27-62-21
Spoiler Actuator (Flt)	21450-11	7-27-45	36826
Spoiler Bypass Valve		7-27-59	27-61-71
Spoiler Differential Mixer Unit	41400-500	7-27-43	27-61-31
Squib Fire Bottle	805300-45		
Stabilizer Electric Trim Actuator	3056B3	7-27-40	27-40-31
Stabilizer Jackscrew Gearbox	65-19482-16	7-27-35	27-40-41
Stabilizer Trim Brake	4472R155	7-27-51	27-40-11

727

Component Part Numbers

Mostly 100
let me have
any updates
you have

Stall Warning Computer	3041692-3		
Stall Warning Shaker	C07202-2		
Stand By Compass	C5C		
Standby Compass	C5C		
Standby Fluid Quantity Transmitter	EA1092A2407	7-29-03	29-33-0/1
Standby Horizon Indicator	705-7V4		
Standby Rudder Actuator		7-27-37	27-20-151
Standby System Elect Motor Driven Pump	10470-2	7-29-19	29-21-11
Standby System Relief Valve		7-29-11	
Static Inverter	3S2060DV109B1	7-24-22	None
Strut Number 1 and 3 Overheat Control Units		7-26-05	26-14-11
Sys A Engine Driven Pump		7-29-22	11656
Sys B Electric Motor Driven Pump No1	57186	7-29-21	40906
Sys B Electric Motor Driven Pump No2	56193	7-29-21	40906
Sys B Fluid Qty Transmitter		7-29-01	29-33-0/1
System B Relief Valve		7-29-10	29-12-33/ 21-33
TAI Duct Temperature Indicator	162BL504	7-30-03	30-13-0/31-00-21
Tail Skid Actuator	R15491	7-32-34	32-71-0/12
Tank Dump Valve	F61B013M2	7-28-27	28-31-31
Temp Switch ACM	548620-1		21-00-00
Temp Switch ACM Overheat	548620-2		21-00-00
Temp Switch ACM Overspeed	548620-2		21-00-00
Temperature Control Selector	548382-2	7-21-15	21-61-0
Temperature Control Selector	548382-2	7-21-15	21-61-0
Toilet Timer	200964-2	7-38-11	38-32-0/11
Total Air Temp & TAS Indicator	513-24680-502		
Total Air Temperature Indicator	161BL501		
Total Fuel Quantity Indicator	81-140-3	7-28-24	28-41-01/31-00-11
Transformer Rectifier 50 Amp	10-3257-3	7-24-08	None
Trimble GPS Nav Unit	81440-03-241B	7-34-001	
Turn And Slip Indicator	3932-1AGA1-1		
Ventral Stair Control Valve	10-60585	7-52-03	52-62-0/61
Vertical Gyro (VR-311)	2587335-11		

727

Component Part Numbers

Mostly 100
let me have
any updates
you have

Vertical Speed Indicator	SLZ9145		
VHF NAV RX	522-4280-101		
VHF Nav Rx	522-4280-01		
VHF Transceiver	622-1181-001	7-23-08	23-21-01
Voltage Regulator	939D150-2	7-24-18	None
VOR / ILS Receiver	522-2450-015		
VOR / ILS Receiver 618m-2b	622-1181-203d		
Water Heater	3E110E	7-38-13	38-11-61
Water Heater	8921082G1	7-38-13	38-11-61
Water Heater		7-38-13	38-11-61
Water Separator	178050-2-1	7-21-29	21-55-0 , 21-55-41
Water Tank Air Compressor	7047M3	7-38-01	38-41-31
Water Tank Drain Valve	12D117	TBA	TBA
Water Tank Pressure Regulator		7-38-02	
Water Tank Quantity Indicator		7-38-08	38-11-11
Water Tank Quantity Transmitter	BAC 10-60770-1	7-38-05	38-11-11
Watts - VAR Indicator	LKCB18019		
Wheel Well Fire Control Unit		7-26-04	26-12-0/11
Window Blind Handle	66-2368-6a	56	56-00-00
Window Blind Shoe	69-48525-2	56	56-00-00
Window Blind Spring	63-1325	56	
Window Heat Controller	961-5023-001		
Window Heat Transformer T47	6897		
Window Shade	65-2013-3b	56	56
Windscreen Wiper	xw20891-150-75		
WINDSCREEN WIPER	XW20891-150-75		
Windshield Heat Controller	231-2		
Windshield Wiper Converter	XW203455-318-40		
Windshield Wiper Motor	XW20548M1	7-30-09	30-42-11/12
Wing Thermal Anti-Ice Shutoff Valve		7-30-01	11657
Yaw Damper Coupler	2585800-1	7-22-14	37217